



1. PLUG INTERVALOMETER RELAY CONNECTOR ① INTO PROPER RECEPTACLE IN REAR OF CAMERA
2. CONNECT RED PINS OF OTHER CABLE ON INTERVALOMETER RELAY TO DUAL G.R. PLUG ②
3. PLUG G.R. PLUG NO ② INTO YELLOW TERMINALS ON REAR OF INTERVALOMETER
4. PLUG G.R. PLUG NO ③ INTO G.R. PLUG NO ② FOR REMOTE MANUAL CONTROL OF CAMERA
5. FOR INTERVALOMETER OPERATION OF CAMERA CONNECT INTERVALOMETER TO G.V.D.C POWER SUPPLY (HOT SHOT BATTERY) AND SET INTERVALOMETER FOR PROPER INTERVAL.
6. FOR REMOTE MANUAL OPERATION ONLY DISCONNECT

Case VII

- 1 - Battery charge λ
- 1 - Varian \times

Hand Carry

- 1 - Nikon camera #600045 - lens 5 cm f/2 722645
- 1 - Weston meter #3 - 1350071
- 1 - operating instructions